


NOTICE DE MONTAGE ET D'UTILISATION ASSEMBLY AND USAGE INSTRUCTIONS

PLANCHER POUR CH 451 / CH 751 FLOOR FOR CH 451 / CH 751

A


DEMONTÉ / UNFIT:

		
Qte:2	Qte:4	Qte:2
HM 10x110	Ø 10x20	FR M10



DESSERRER LES VIS DU CHASSIS
AVANT LE MONTAGE DU PLANCHER.



UNTIGHT THE CHASSIS SCREWS
BEFORE THE POSITIONNING THE
WOODEN FLOOR.

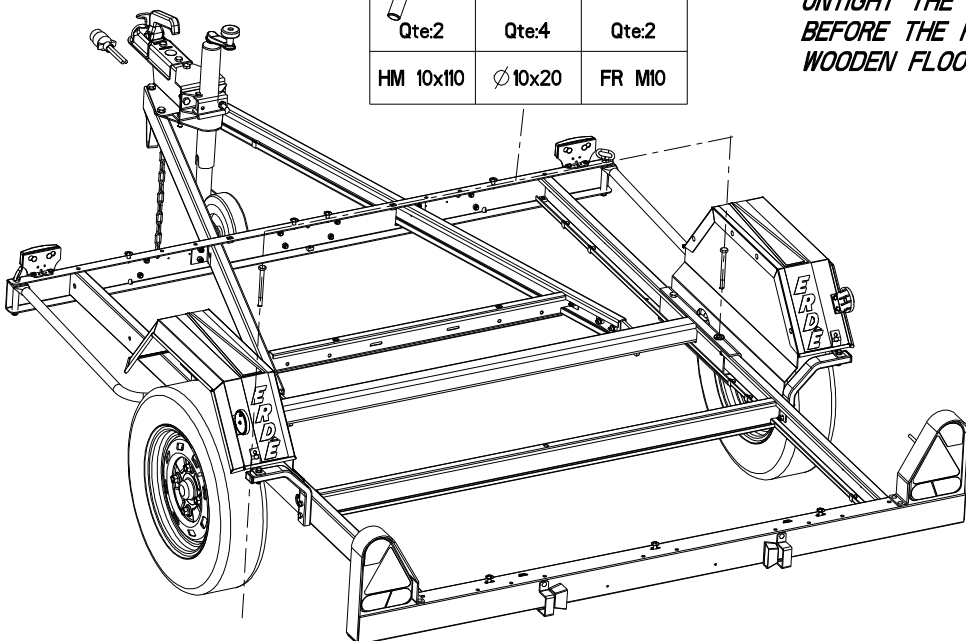

B

	
Qte:4	Qte:4
TRL M8X25	FR M8

			
Qte:2	Qte:2	Qte:2	Qte:2
HM 10x110	entretoise tube	Ø 10x20	FR HM 10

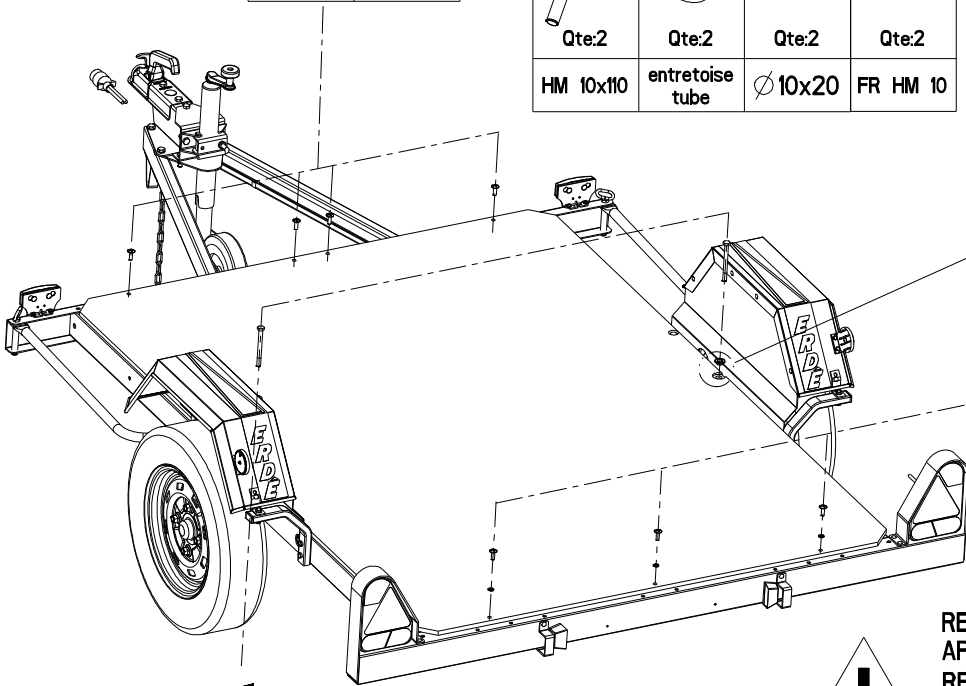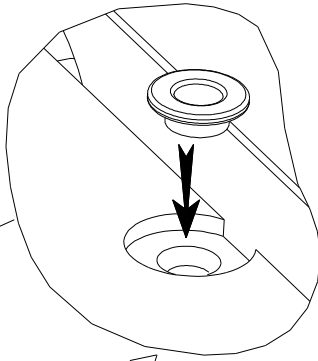

	
Qte:3	Qte:3
TRL M8x25	Ø 8

RESSERRER LES VIS DU CHASSIS
APRES MONTAGE DU PLANCHER.

RETIGHT THE CHASSIS SCREWS
AFTER THE POSITIONNING OF THE
WOODEN FLOOR.

